



NOTE:

The Motorcraft Module on the side of the distributor must be removed and the ECU wired directly to the Hall Effect Sensor inside the distributor.

A separate Coil Igniter must be used.