


ECU PINS - MALE PIN VIEW

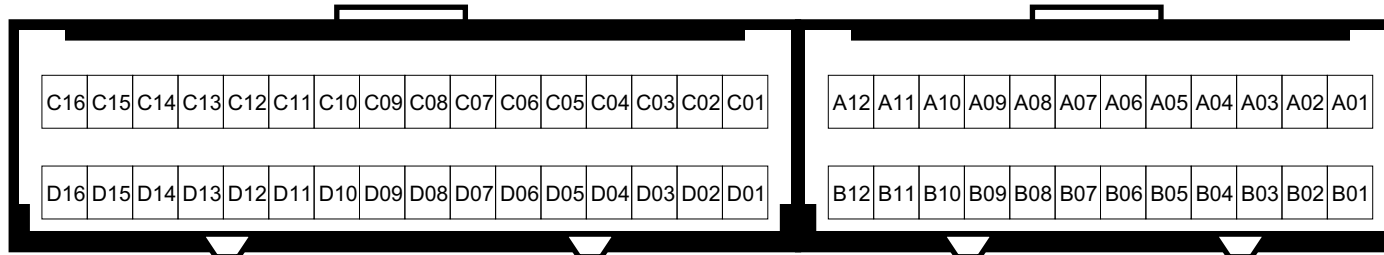

D01 - GND
D02 - GND
D03 - GND
D04 - Ignition Output to Igniter
D05 - Aux 3 Outpu - DFI Bypass Control
D06 - GND
D07 - Oxy Sensor
D08 - NC
D09 - NC
D10 - GND
D11 - NC
D12 - NC
D13 - Boost Control - not normally connected
D14 - Tacho Output - not normally connected
D15 - Inj1, Inj2
D16 - Inj3, Inj4

C01 - Thermofan
C02 - Aux1 Output A/C Relay
C03 - Stepper Motor B
C04 - Stepper Motor A
C05 - Stepper Motor C
C06 - Stepper Motor D
C07 - Aux 4 Output
C08 - NC
C09 - NC
C10 - Engine Temp Sensor
C11 - External MAP Sensor
C12 - Air Temp Sensor
C13 - Throttle Position Sensor
C14 - Sensor 5V Output
C15 - NC
C16 - NC

B01 - NC
B02 - NC
B03 - GND
B04 - NC
B05 - Timing Input
B06 - NC
B07 - NC
B08 - Aircon Request
B09 - NC
B10 - NC
B11 - NC
B12 - NC

A01 - Fuel Pump - 12V when active
A02 - NC
A03 - NC
A04 - NC
A05 - Aux 2 - Engine Check Light
A06 - Ignition 12V in
A07 - Aux 4
A08 - NC
A09 - NC
A10 - GND
A11 - GND
A12 - GND

Delco VN-VP 88-92

Date: 27/02/07

Rev 002

Page 1 of 1

WOLF3D