

## NOTES

The output of the sensor is a Falling Edge Trigger from the sensor to the Reluctor Interface 1.


The output of the Reluctor Interface 1 is Rising Edge. Using the PC Software or the Hand Controller, set the Wolf3D Version 4 for Rising Edge Input Triggering.

Pin **C** - Connect the Wolf3D Input Trigger Shield to this pin  
Do not connect the Blue/Green Signal Ground wire to this pin.

- A - Signal - Falling Edge Output from Sensor
- B - Signal Ground
- C - Shield

## CRANK SENSOR

Part Number - 0 261 210 003

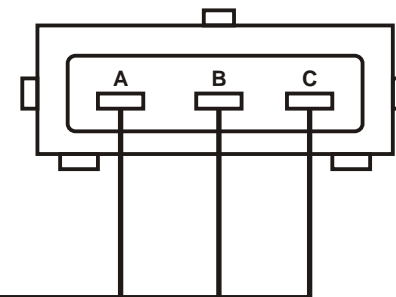

**Wolf3D V4  
ECU**

TRIG GND 27  
TRIG1 28  
TRIG +5V 30

BL/SHIELD  
BRN/W  
R/Y

TRG LOOM



BLUE  
BROWN  
GREY - Not Used  
RED - Not Used