


ECU PINS - MALE PIN VIEW

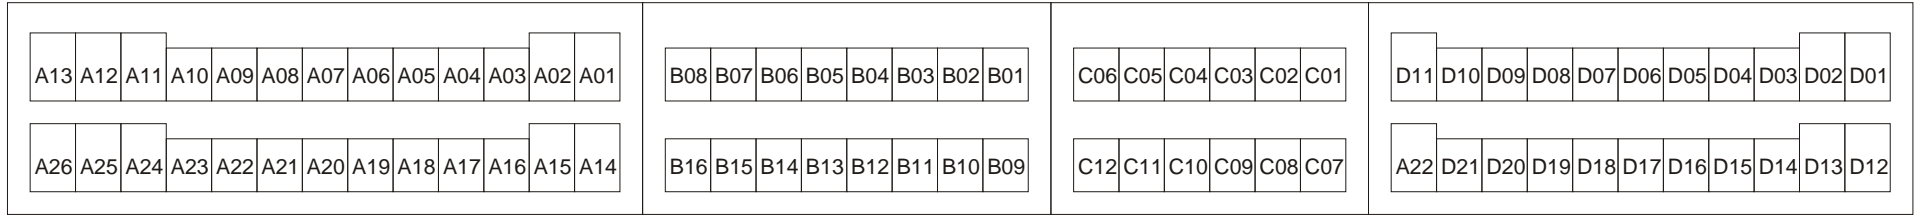

- A01** - Idle
- A02** - Idle Slave
- A03** - Boost Control
- A04** - Aux4 Output - Second Thermofan
- A05** - NC
- A06** - Aux5 Output - Purge Control
- A07** - IGN3
- A08** - IGN2
- A09** - IGN1
- A10** - IGN4
- A11** - INJBANK2A
- A12** - INJBANK1B
- A13** - INJBANK1A
- A14** - GND
- A15** - GND
- A16** - NC - Power Steering Oil Pressure
- A17** - Thermofan
- A18** - NC
- A19** - NC - Engine Check Light
- A20** - GND - Pressure Exchange Solenoid
- A21** - NC
- A22** - Aux3 Output - A/C Cut
- A23** - Fuel Pump
- A24** - GND
- A25** - GND
- A26** - INJBANK2B

- B01** - GND
- B02** - Cam Sensor
- B03** - GND
- B04** - GND
- B05** - Knock Sensor - Not Used
- B06** - NC
- B07** - NC
- B08** - NC
- B09** - Aircon Request
- B10** - NC
- B11** - NC
- B12** - NC
- B13** - Aux3 Input
- B14** - Aux2
- B15** - Aux1
- B16** - Tacho

- C01** - GND
- C02** - TPS
- C03** - +5V
- C04** - GND
- C05** - Crankshaft Sensor
- C06** - GND
- C07** - NC
- C08** - Air Temp
- C09** - NC
- C10** - NC - Neutral Switch AT
- C11** - NC - Vehicle Speed AT
- C12** - NC

- D01** - NC
- D02** - +12VIN
- D03** - +5V
- D04** - External MAP Sensor
- D05** - NC
- D06** - Oxy Sensor
- D07** - Engine Temp
- D08** - +12VIN
- D09** - NC - MAF Sensor
- D10** - GND
- D11** - GND
- D12** - NC
- D13** - +12VIN
- D14** - NC
- D15** - NC
- D16** - NC
- D17** - GND
- D18** - NC
- D19** - Staged Injection
- D20** - NC
- D21** - GND
- D22** - GND