


ECU PINS - MALE PIN VIEW

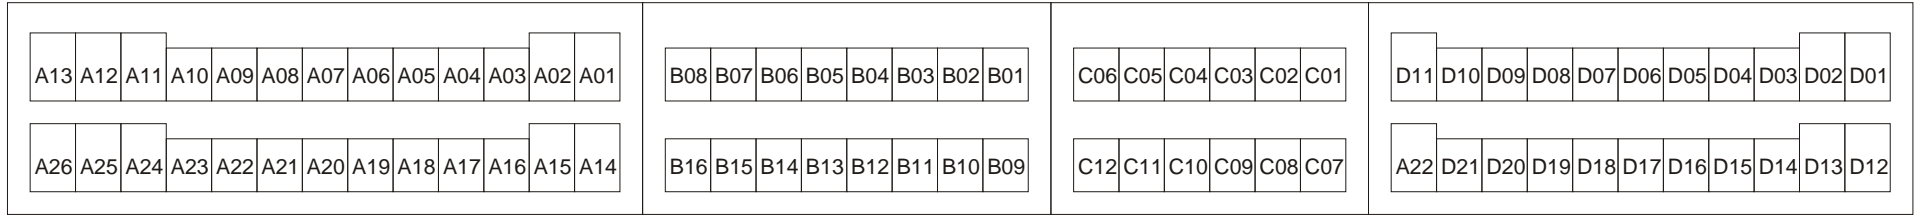

This connector bay is not present on the original ECU

- A01** - Idle
- A02** - Idle Slave
- A03** - Boost Control
- A04** - NC - Staged Injection
- A05** - NC
- A06** - GND - Pressure Exchange Solenoid
- A07** - Fuel Pump - Without Immobiliser
- A08** - Aux2 - Malfunction Indicator Lamp
- A09** - IGN1
- A10** - IGN2
- A11** - INJBANK2A
- A12** - INJBANK1B
- A13** - INJBANK1A
- A14** - GND
- A15** - NC - Constant +12V
- A16** - NC
- A17** - Fuel Pump - With Immobiliser
- A18** - NC
- A19** - NC
- A20** - NC
- A21** - Aux3 Output - A/C Cut
- A22** - NC
- A23** - NC
- A24** - GND
- A25** - GND
- A26** - INJBANK2B

- B01** - NC - Aux 4 Input
- B02** - NC - Inhibit Switch
- B03** - NC - Wheel Speed
- B04** - NC - Data Link
- B05** - NC - Data Link
- B06** - NC - Air Temperature Sensor
- B07** - NC - Aux 3 Input
- B08** - Thermofan
- B09** - NC - Inhibit Switch
- B10** - Aircon Request
- B11** - NC
- B12** - Immobiliser
- B13** - Immobiliser
- B14** - Tacho
- B15** - Aux1 Output - Purge Control Solenoid
- B16** - Aux4 Output - Second Thermofan

- C01** - NC
- C02** - NC
- C03** - NC
- C04** - NC
- C05** - NC
- C06** - NC
- C07** - NC
- C08** - NC - Air Temp
- C09** - NC - Aux3 Input
- C10** - NC - Aux1
- C11** - NC - Staged Injection
- C12** - NC

- D01** - NC - +12V
- D02** - NC - +12V
- D03** - Engine Temp
- D04** - Knock Sensor - Not Used
- D05** - Oxy Sensor
- D06** - NC - MAF Sensor
- D07** - NC - MAF Sensor Ground
- D08** - Crank Sensor - With Immobiliser
- D09** - GND
- D10** - Cam Sensor - With Immobiliser
- D11** - +12VIN
- D12** - GND
- D13** - GND
- D14** - +5V
- D15** - NC
- D16** - TPS
- D17** - MAP Sensor
- D18** - GND
- D19** - NC
- D20** - NC - Read Memory
- D21** - NC - Test Mode Connector
- D22** - Ignition Control Relay

Subaru WRX '97 to '98

Date: 06/12/04

Rev 002

Page 1 of 1

WOLF3D