


ECU PINS - MALE PIN VIEW

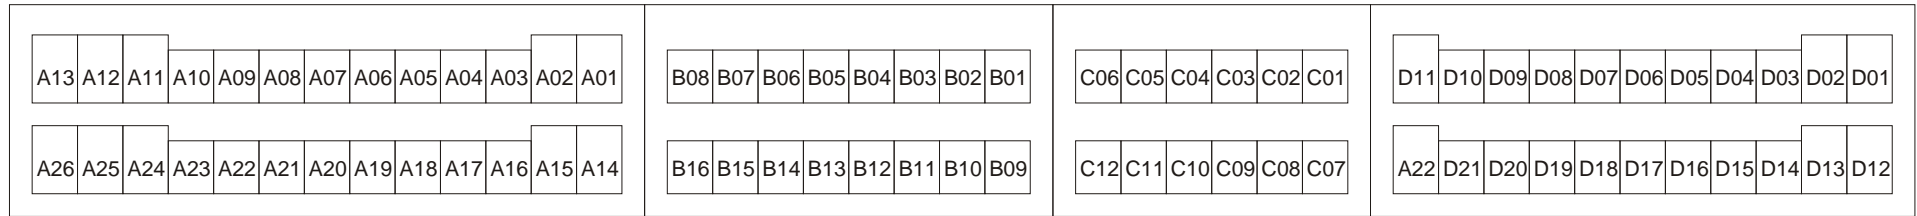

A01 - Timing in Ref
A02 - Timing in Sync
A03 - NC
A04 - NC
A05 - NC
A06 - Boost Control
A07 - NC
A08 - Oxy Sensor Heating Ground
A09 - Idle Slave
A10 - NC
A11 - INJBANK1B
A12 - INJBANK1A
A13 - GND
A14 - GND
A15 - NC
A16 - NC
A17 - Fuel Pump
A18 - Aux 1 - TVIS
A19 - NC
A20 - IGN1
A21 - Idle Master
A22 - NC
A23 - NC
A24 - INJBANK2B
A25 - INJBANK2A
A26 - GND

B01 - +5V
B02 - NC
B03 - Air Temperature
B04 - Engine Temperature
B05 - NC
B06 - Oxy Sensor
B07 - NC
B08 - NC
B09 - GND
B10 - NC
B11 - TPS
B12 - NC
B13 - External MAP Sensor
B14 - NC
B15 - NC
B16 - Ground

C01 - Aux 4 Input
C02 - NC
C03 - NC
C04 - NC
C05 - NC
C06 - NC
C07 - Aux 4 Output
C08 - Aux 3 Input
C09 - Staged Injection
C10 - Ign 4 - Multicoil
C11 - Ign 3 - Multicoil
C12 - Ign 2 - Multicoil

D01 - NC
D02 - NC
D03 - NC
D04 - NC
D05 - Aux5 Output - Dash Warning Light
D06 - NC
D07 - NC
D08 - NC
D09 - NC
D10 - Aircon Request
D11 - NC
D12 - +12VIN
D13 - +12VIN
D14 - Aux 4 Output
D15 - Aux 2 Input/Output
D16 - NC
D17 - NC
D18 - NC
D19 - NC
D20 - NC
D21 - Aircon Enable - Aux3 Output
D22 - NC

Toyota Celica ST185GT4, ST205GT4
MR2 Post Oct 92

Date: 20/09/04

Rev 001

Page 1 of 1

WOLF3D