


ECU PINS - MALE PIN VIEW

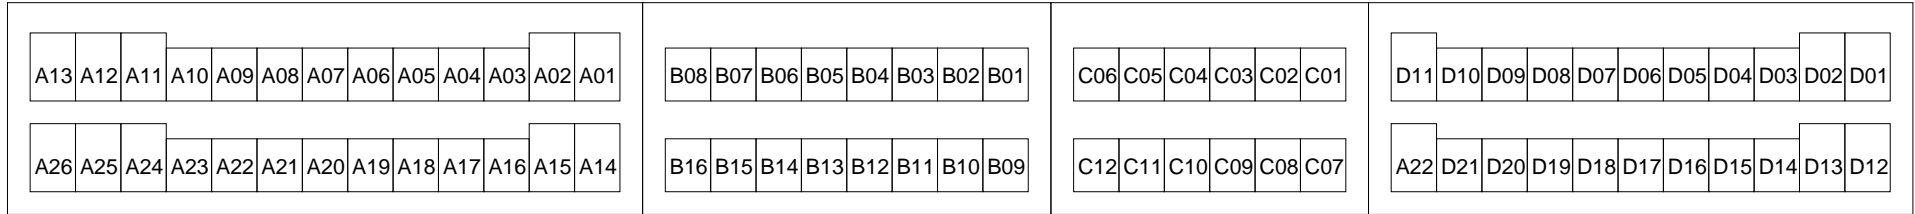

- A01** - Idle Slave - Non turbo Only
- A02** - NC - Neutral Switch
- A03** - Engine Temperature
- A04** - External MAP Sensor
- A05** - Air Temperature
- A06** - IGN #1 Output
- A07** - NC - IGf - Ignition Confirmation
- A08** - NC - G1
- A09** - GMinus
- A10** - Oxygen Sensor
- A11** - NC - STA
- A12** - INJ #1
- A13** - GND
- A14** - Idle Master
- A15** - Boost Control
- A16** - Ground
- A17** - Throttle Position Sensor
- A18** - +5V Output
- A19** - NC - Closed Throttle Swtich
- A20** - Sync Input
- A21** - Reference Input
- A22** - Ground
- A23** - NC Knock Sensor
- A24** - Ground
- A25** - INJ #3
- A26** - GND

- B01** - BPlus 12Vin
- B02** - NC - Constant 12V
- B03** - NC - Diag Connector
- B04** - Fuel Pump Relay
- B05** - NC - ELS
- B06** - A/C Control
- B07** - BC - Boost Control Switch
- B08** - NC - T - Diag Connector
- B09** - 12Vin
- B10** - Aux 5 Output - Engine Check Light
- B11** - NC - EGW
- B12** - A/C Control
- B13** - NC - Vehicle Speed Sensor
- B14** - NC - A/C Control
- B15** - Aux 4 Input - AC3
- B16** - NC - Diag Connector

- C01** - NC
- C02** - NC
- C03** - NC
- C04** - NC
- C05** - NC
- C06** - NC
- C07** - NC
- C08** - NC
- C09** - NC
- C10** - NC
- C11** - NC
- C12** - NC

- D01** - Not Normally Connected - INJ #3
- D02** - NC
- D03** - NC
- D04** - NC
- D05** - NC
- D06** - NC
- D07** - NC
- D08** - NC
- D09** - NC
- D10** - NC
- D11** - NC
- D12** - Not Normally Connected - INJ #4
- D13** - Not Normally Connected - Staged Injector Output
- D14** - Not Normally Connected - Aux 4 Output
- D15** - NC
- D16** - Not Normally Connected - Aux 2 Input/Output
- D17** - Not Normally Connected - Aux 1 Input/Output
- D18** - NC
- D19** - NC
- D20** - NC
- D21** - Not Normally Connected - Aux3 Output
- D22** - Not Normally Connected - Thermofan Relay

Toyota Starlet EP82

Date: 17/08/06

Rev 001

Page 1 of 1

WOLF3D