


BMW E30 - Male Pin View

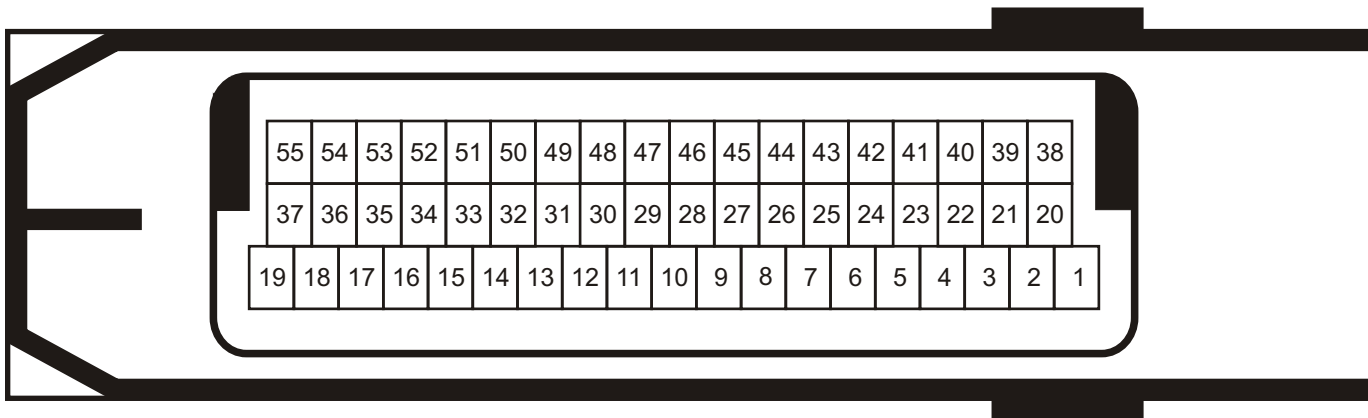

- | | | |
|----------------------------|---------------------------|----------------------------|
| 1 Coil - M&W Pin 1 | 20 Not Used | 38 Not Used |
| 2 Ground - A26 | 21 Not Used | 39 Not Used |
| 3 Fuel Pump - A10 | 22 Idle Slave - B11 | 40 A/C Request -A2 |
| 4 Idle Master - A3 | 23 Power Ground - A27 | 41 A/C - |
| 5 Purge solenoid - B8 | 24 Power Ground - A27 | 42 Start Signal - J2-2 |
| 6 Tacho output - A23 | 25 Not Used | 43 Not Used |
| 7 MAF/MAF sensor - B21 | 26 Power Ground | 44 Airtemp - A21 |
| 8 Not Used | 27 Ignition Switch - J4-1 | 45 Engine Temp - A20 |
| 9 Not Used | 28 O2 sensor -A31 | 46 Not Used |
| 10 Power Ground - A26 | 29 Vss - B4 | 47 REF Trigger - A28 |
| 11 Not Used | 30 Not Used | 48 REF Lo |
| 12 5v - A18 | 31 Power Ground - A27 | 49 Not Used |
| 13 Engine check light - B9 | 32 Not Used | 50 Not Used |
| 14 Power Ground - A26 | 33 Not Used | 51 Not Used |
| 15 Not Used | 34 Not Used | 52 Throttle Position - A19 |
| 16 Injector Output 1 - A4 | 35 Not Used | 53 Not Used |
| 17 Injector output 2 - A5 | 36 ECCS Relay - J2-3 | 54 Not Used |
| 18 Not Used | 37 +12V IN | 55 Not Used |